

Motolux

Motorisation



MOTOR RF MT45-30/17 OBSTACLE DETECTION PROGRAMMING GUIDE

PAIRING THE REMOTE

- With the power DISCONNECTED.
- Select the channel you wish the motor to be on.
- Press and hold the UP button on the remote.
- Whilst continuing to hold the up button apply power to the motor.
- The Motor will jog.
- Then PRESS the UP button again and the motor will jog for a second time.
- This is now paired with the remote control.

CHANGING MOTOR DIRECTION

- Press the STOP [middle] button of the remote/channel for 7 seconds. The motor will jog.
- Briefly press the DOWN [bottom] button within 10 seconds. The motor will jog.

SETTING TOP & BOTTOM LIMITS

NOTE: Top limit first.

When setting any limits, if there is no action within 30 seconds, the motor will exit limit setting mode.

Motor might be in step-by-step mode - this will go to contentious movement after the limits are set.

- Using a paperclip or similar, press and hold the prog. button found on the side of the remote control for more than three seconds to enter limit setting mode. The motor will jog.
- Set the top limit first: Press UP to move the blind to the desired top limit.
- Press and hold the prog. button on the side of the remote control for more than three seconds to store that limit. The motor will jog.
- Press down to move the blind to the desired bottom limit.
- Press and hold the prog. button on the side of the remote control for more than three seconds to store that limit. The motor will jog. Down limit set successfully

IMPORTANT

With the blind at the bottom limit, Press and hold the prog. button on the side of the remote control for more than three seconds to exit limit setting mode. The motor will jog.

TO SET INTERMEDIATE STOPPING POSITIONS

NOTE: It is possible to set up to 3 intermediate stopping positions including top and bottom. An up/down command will send the motor to the next limit in that direction. To go straight to the top or bottom limit, hold the up/down button for 3s. The top and bottom limits must be set and stored prior to setting any intermediate stopping positions.

- Press UP or DOWN to move the blind to the desired intermediate stopping position.
- Press and hold the prog. button on the side of the remote control for more than three seconds to enter limit setting mode. The motor will jog.
- Release, then press and hold the prog. button on the side of the remote control for more than three seconds to store that limit. The motor will jog.

TO ADJUST A LIMIT

- Move the blind to the limit to be adjusted.
- Press and hold the prog. button on the side of the remote control for more than three seconds to enter limit setting mode. The motor will jog.
- Press UP or DOWN to move the blind to the desired new position.
- Press and hold the prog. button on the side of the remote control for more than three seconds to store the limit. The motor will jog.

TO ADD A NEW REMOTE OR CHANNEL

- Using a remote or channel ALREADY PROGRAMMED to the motor, wake the motor up by pressing and holding the STOP [middle] button for more than three seconds. The motor will jog.
- Briefly press the UP button on the NEW remote/channel within 10 seconds. The motor will jog.

TO DELETE A NEW REMOTE OR CHANNEL

- On the remote or channel to be deleted, wake the motor up by pressing and holding the STOP [middle] button for more than three seconds. The motor will jog.
- Using a paperclip or similar, within 10 seconds, press and hold the programming button on the side of the remote control for three seconds. The motor will jog.

TO DELETE ANY LIMIT

NOTE: The top limit cannot be deleted, see factory reset.

- Move the blind to the limit to be deleted.
- Press and hold the programming button on the side of the remote control for approximately seven seconds. The motor will jog.

NOTE: The motor will jog twice, keep the button depressed until the second jog after 7 secs.

TO SWITCH FROM AUTOMATIC MOVEMENT TO MANUAL MOVEMENT (OR VICE VERSA)

- Wake the motor up by pressing the STOP [middle] button for 5 seconds. The motor will jog.
- Within 10 seconds, press the STOP button briefly. The motor will jog.

TO RETURN TO FACTORY MODE: FACTORY RESET

NOTE: If there is no action within 10s, the motor will exit program mode automatically.

- Press stop button for 5 seconds to wake up the motor, the motor will jog.
- Press and hold of the remote control for 7 seconds, motor will jog at 1st second, and jog twice after 7 Seconds.